

Saxophone

SELMER		SNR: ab
1922	Selmer 22	750
1923		1401
1924		2351
1925		3351
1926	Selmer 26	4451
1927		5601
1928		7851
1929		9701
1930	Super Cigar C	11951
1931		14001
1932		15750
1933		17250
1934	Radio Improve	18700
1935		20100
1936	Balanced Acti	21750
1937		22650
1938		25600
1939		27650
1940		29300
1941		29750
1942		30500
1943		31150
1944		31580
1945		31850
1946		32350
1947		33700
1948	Super Action	35800
1949		38500
1950		41500
1951		45100
1952		48300
1953		51800
1954	Mark VI	55200
1955		59000
1956		63400
1957		68900

1958		74500
1959		80400
1960		85200
1961		91300
1962		97300
1963		104500
1964		112500
1965		121600
1966		131800
1967		141500
1968		152400
1969		162500
1970		173800
1971		184900
1972		196000
1973		208700
1974	Mark VII	220800
1975		233900
1976		246800
1977		261100
1978		276100
1979		289700
1980		303100
1981	Super Action	315500
1982		327300
1983		340200
1984		353300
1985		36640
1986	Super Action	378800
1987		391000
1988		406000
1989		422500
1990		439600
1991		457500
1992		473600
1993		
1994		
1995	Super Action 80 Serie III	
	Sopran	
1996		
1997	Super Action 80 Serie III	
	Tenor	
1998		
1999	Super Action 80 Serie III	
	Alto	